


IC-2730D/A/E Mini Repeater Function

#02 EUR-01	Remove D319, after that, key operation
#03 ITR-01	Remove D319, after that, key operation
#04 TPE-01	Remove D319, after that, key operation
#05 USA-01	Key operation only
#06 KOR-01	Remove D319, after that, key operation
#09 EXP-01	Remove D319, after that, key operation
#10 CHN-01	Key operation only

Key operation:

1. Turn off the radio
2. Push and hold simultaneously Left [MAIN], Right [MAIN] and [MONI], then turn on by pushing [PWR] key.

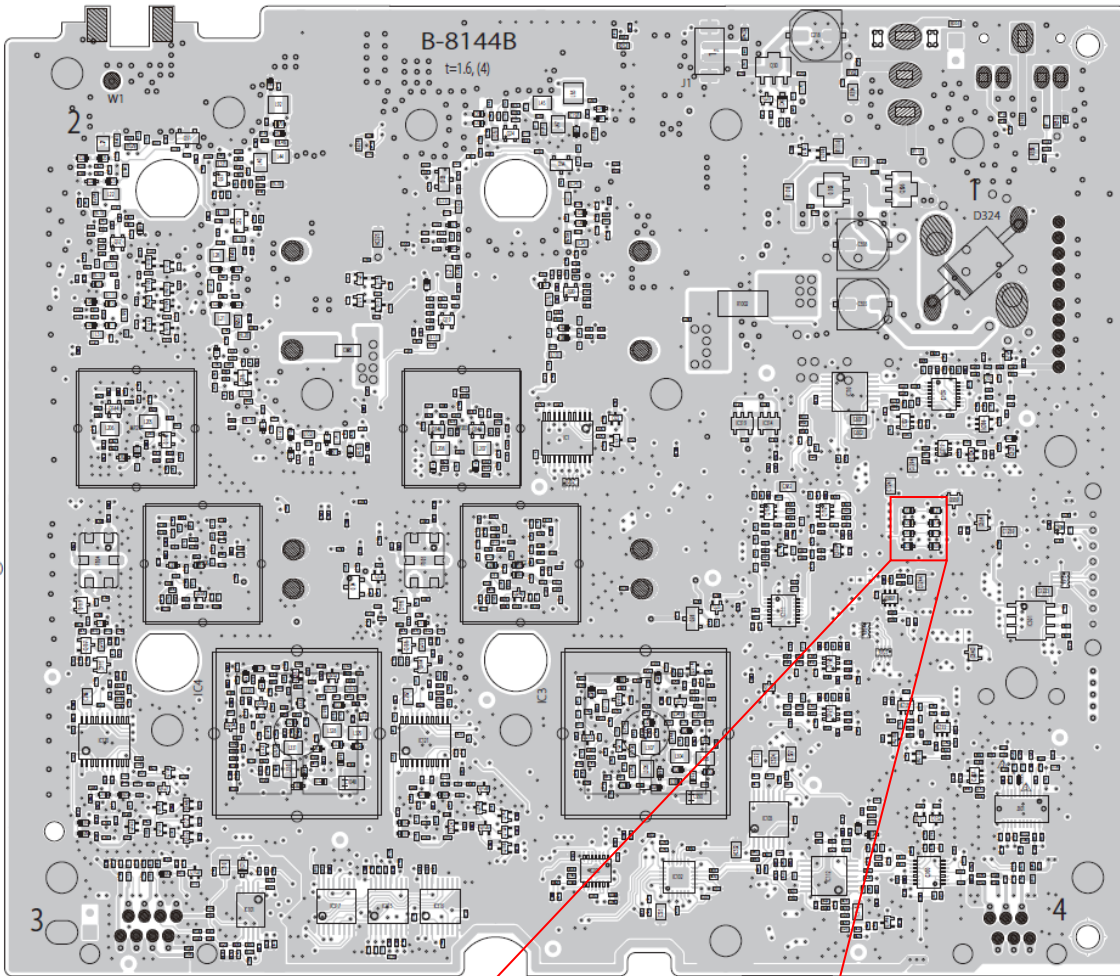

D319

